

SQUARE ANCHOR BOLT INSTALLATION

MOUNTING ACCESSORIES PREPARATION

Remove the accessories in Fig1 from the package, and make sure all parts in good condition and right qtls.



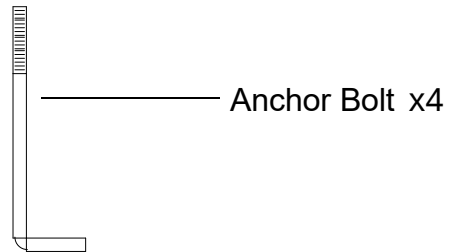



Fig1

INSTALLING ANCHOR BOLT

- Prepare site. Get the anchor bolt carrier assembled as Fig2 and protect the threads from concrete splash with silicon caps.
- Ensure that concrete base is suitable for the bollard load.
- Sink the anchor bolts into the concrete as Fig3 leaving the threaded portion 1-1/2~2" as Fig4 above the cement . And remove the silicon caps.

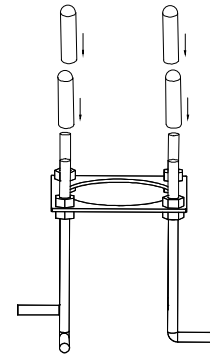


Fig2

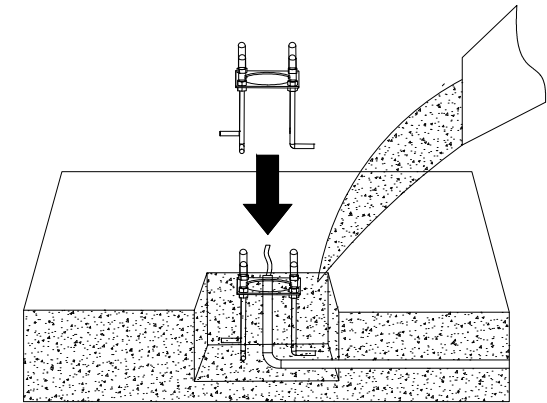


Fig3

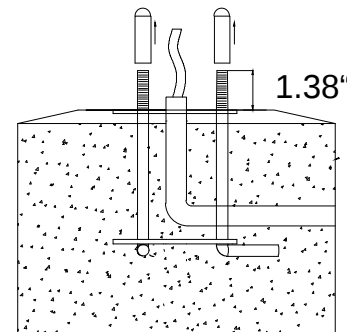


Fig4